RPG7 REMOTE CONTROL USER GUIDE



MOTOR DIRECTION

LEFT:

Leftside when looking out from inside the house

RIGHT:

Rightside when looking out from inside the

GENERAL CONTROL

Open & Pause both gate
 Stop both gates (while opening) Close both gates (while opened) No response when gate is closed
Open & Pause left gate
Open & Pause right gate


ADVANCE CONTROL

AUTOCLOSE SETTINGS • Siren Beep Once: Auto close 1 minute • Siren Beep Twice: Auto close 2 minute • Siren Long Beep: Auto close deactivated ★ Auto close can only be set when the gate is closed + safety beam is not blocking and enabled **PANIC ALARM** Alarm will sound for 3 minutes Press any other button will turn off the **MOTION ALERT + ALARM** • Siren Beep Once: Gate motion alert active Siren Beep Twice: Gate motion alert active + Intruder alarm armed Siren Long Beep: Gate motion alert deactivated + Intruder alarm disarmed ★ Motion alert can only be set when the gate is closed ★ Intruder alarm can only be set when the gate is closed + safety beam is not blocking and enabled **FORCE CLOSE LEFT GATE** Long pressed ★ Only possible when the left gate is fully opened **FORCE CLOSE RIGHT GATE** Long pressed ★ Only possible when the right gate is fully opened **FORCE CLOSE BOTH GATE** Long pressed ★ Only possible when both gate is fully opened

NOTES

- ★ Siren Beep will also translate to a clicking noise on the right side of the motor
- Beep Once: Click onceBeep Twice: Click twice
- Long Beep: Click thrice (3 times)

REMOTE DUPLICATE

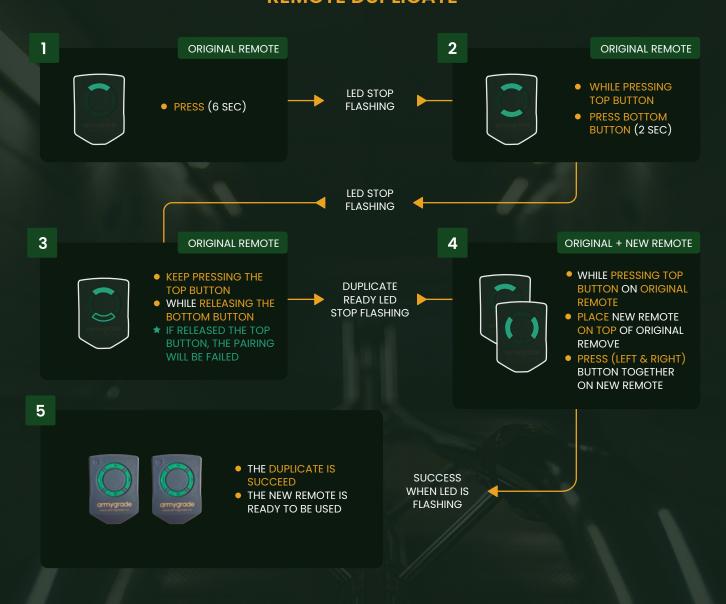

- Duplicating from the original remote to the new remote
- Follow the flow chart above the step to duplicate remote:



- At step 3, please make sure not to release the "top button" while the "Bottom button" is released.
- At step 4, make sure to place the new remote on top of the original remote and press "Left and Right" buttons on the source remote while maintaining pressing the "Top button" on the original remote.